


REMOTE CABLE WIRING

Used to connect the main electronics with remote sensor.

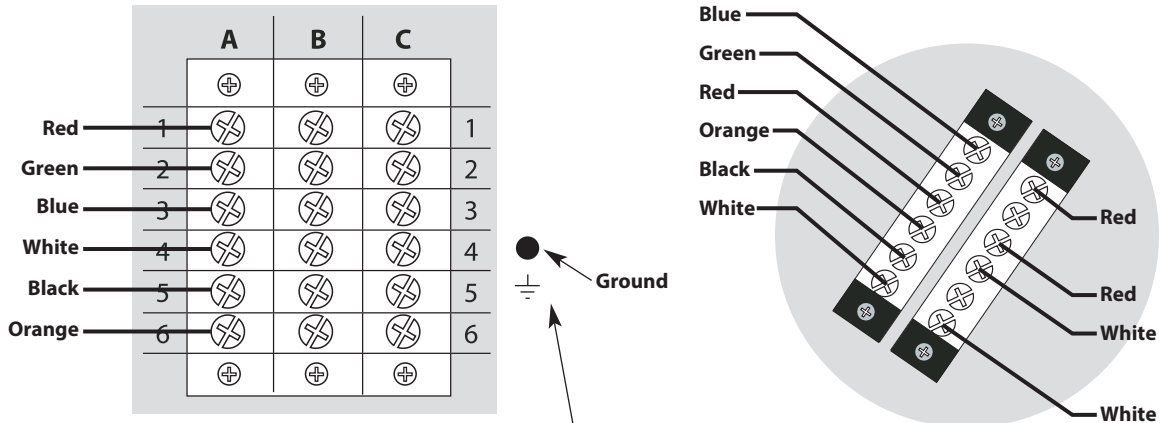

NOTE: Serial numbers of the remote electronics must match serial number of main electronics.

NOTE: Ground the cable shield in the transmitter housing. There is no ground connection in the junction box.

